

FIG. 1

2/20

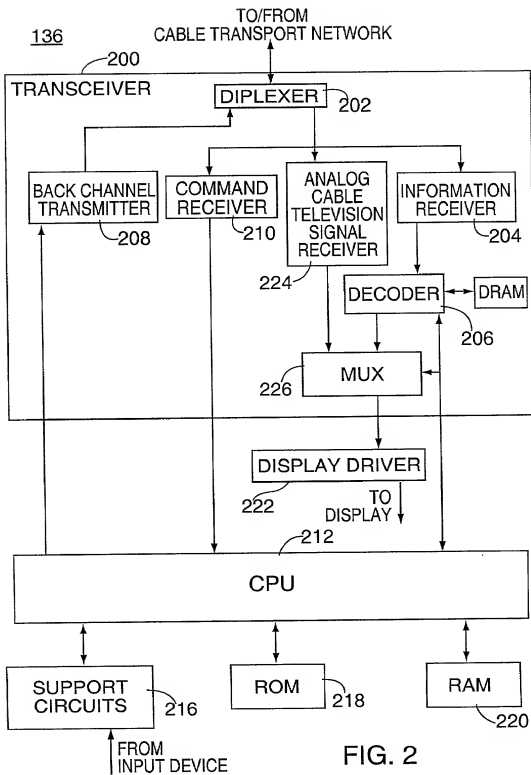 


FIG. 2

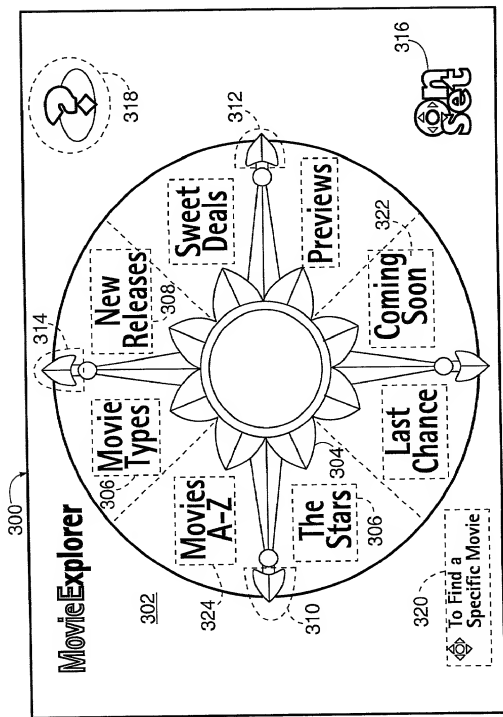 


FIG. 3

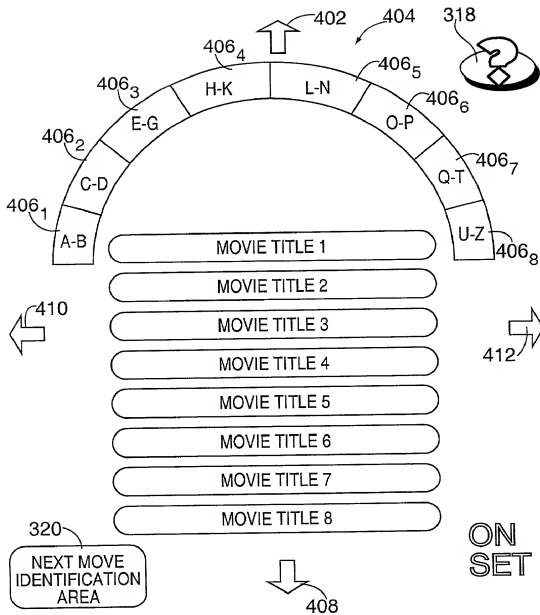 


FIG. 4

 
 
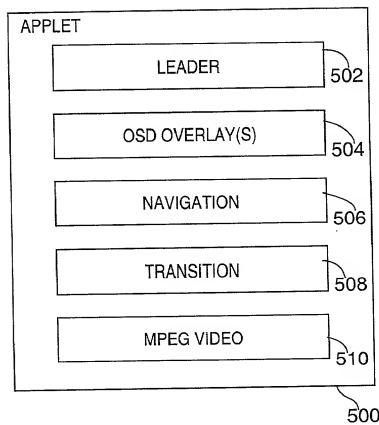 


FIG. 5

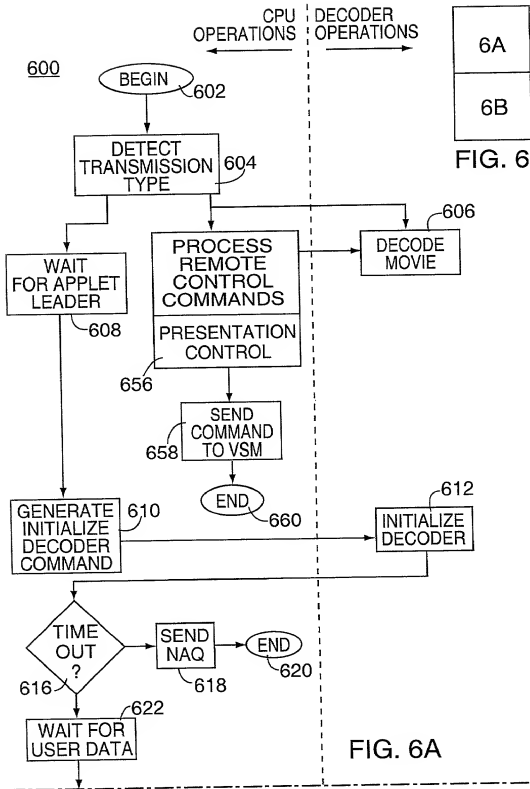

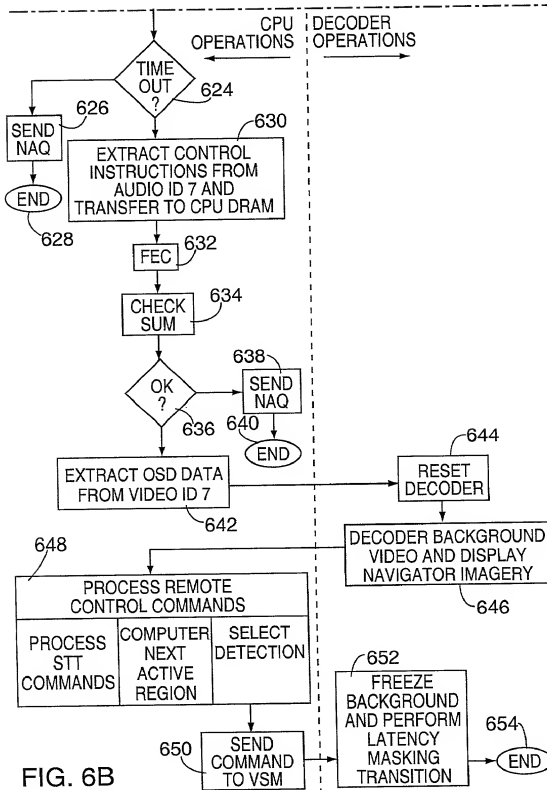

8/20

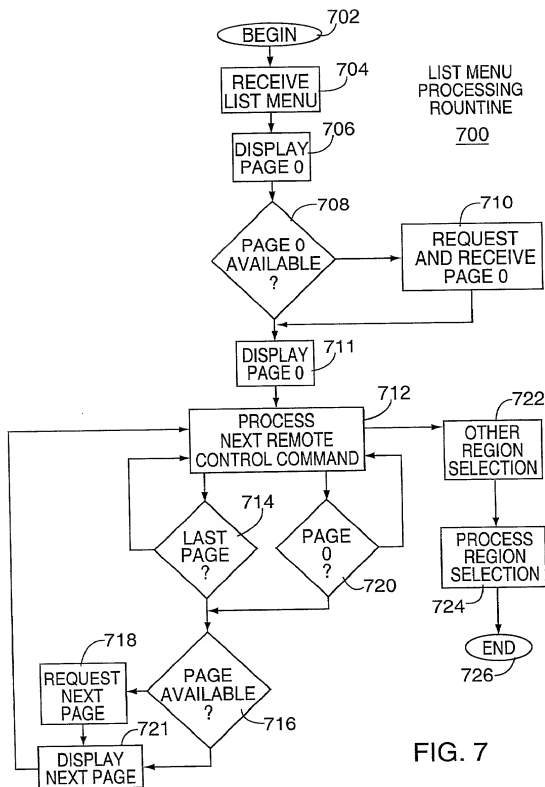 


FIG. 7

9/20

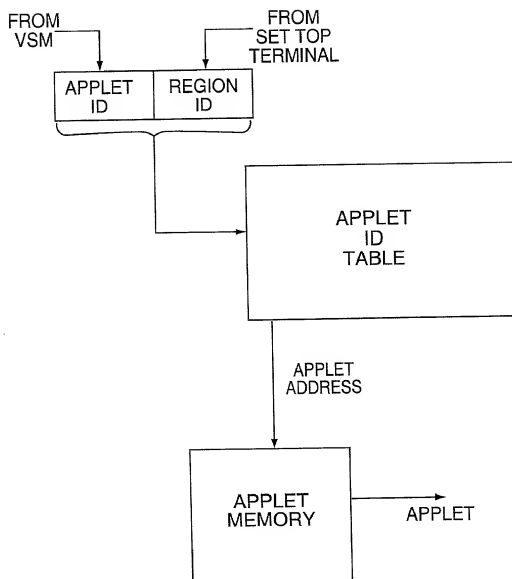 


FIG. 8

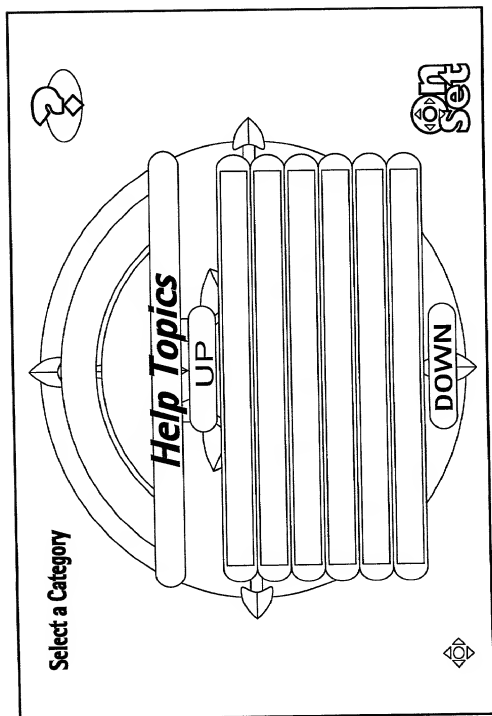 


FIG. 9

11/20

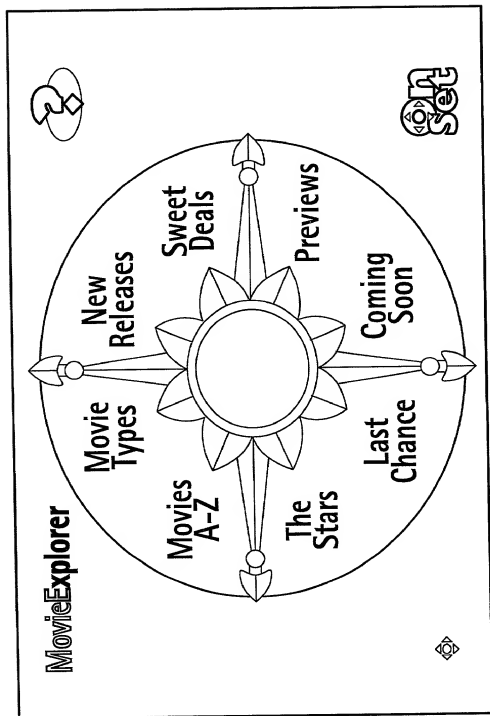 


FIG. 10

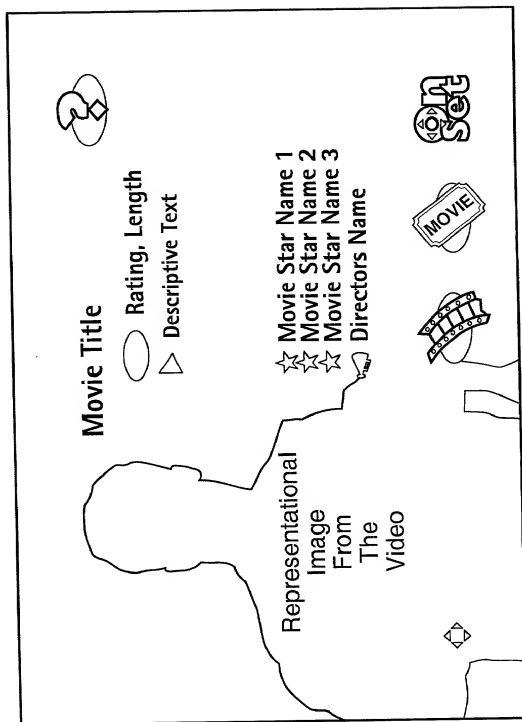 


FIG. 11

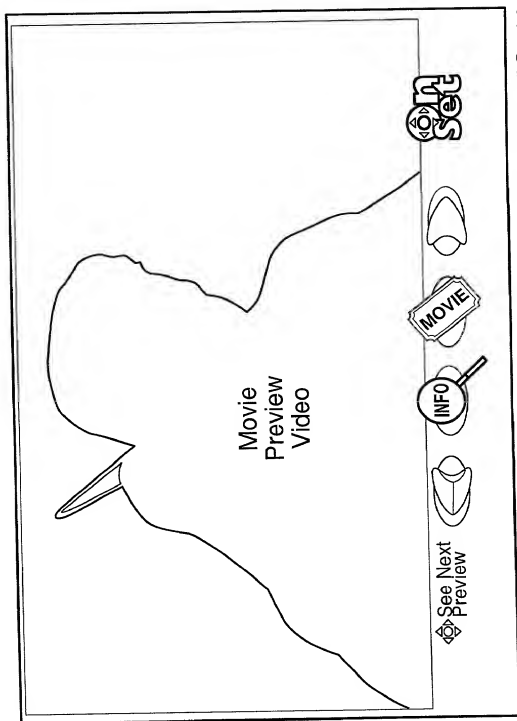 


FIG. 12

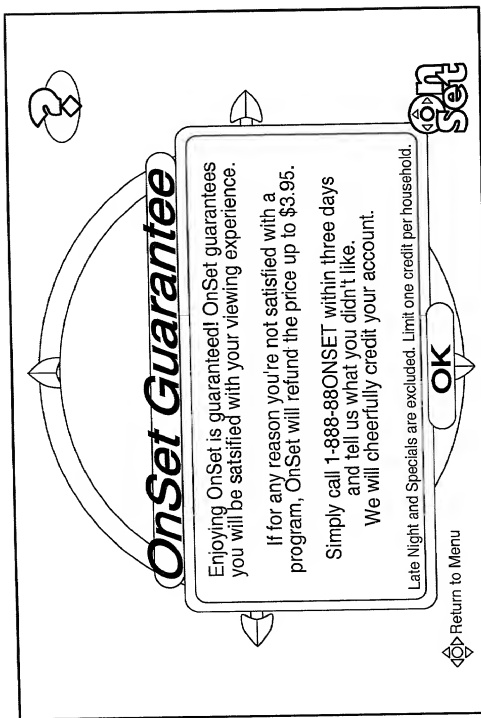 


FIG. 13

VO: Text of Guarantee except for caveats



OnSet Set Up

LONG-NAMED FAMILY'S ACCOUNT

Left or Right

1. Rating Limit:

2. Spending Limit:

3. PIN Number: Enter Numbers

SAVE

No Restrictions

VO: It's easy to set ratings and spending limits. Highlight a limit and move the OnSet button left or right to change it. To set or reset the PIN Number, just enter four digits from the remote control. Select "Save" when you're done, or press "Return" to

FIG. 14

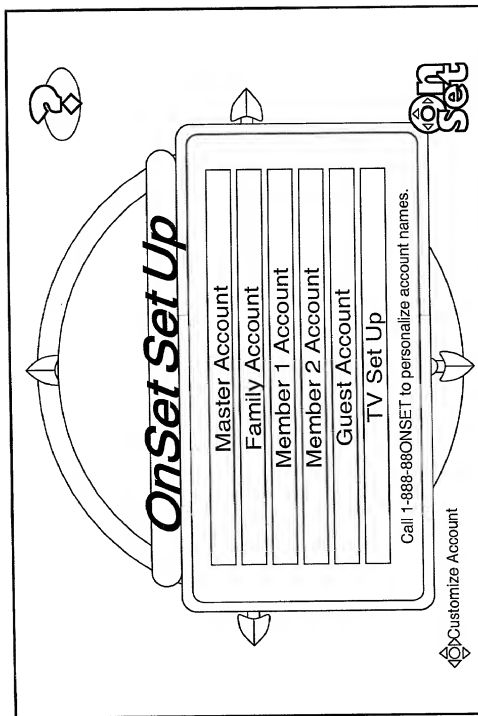 


FIG. 15

VO: You can set up accounts to control spending and ratings limits for the members of your family. You can also set up this TV to require PIN numbers to use OnSet.



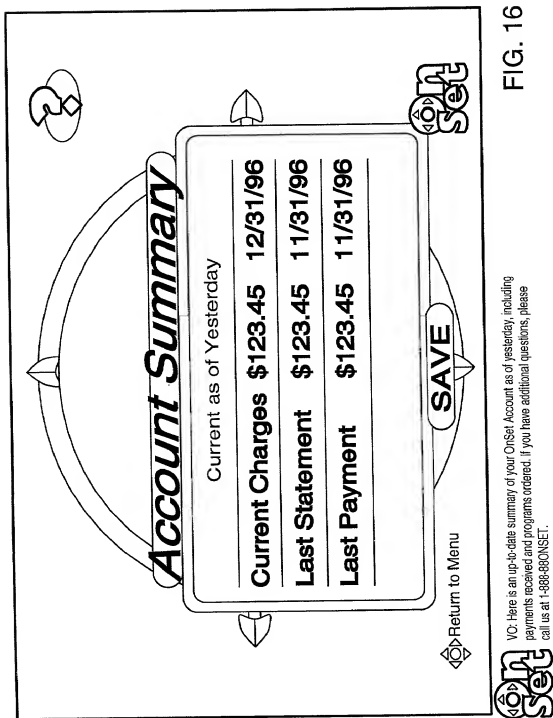 


FIG. 16

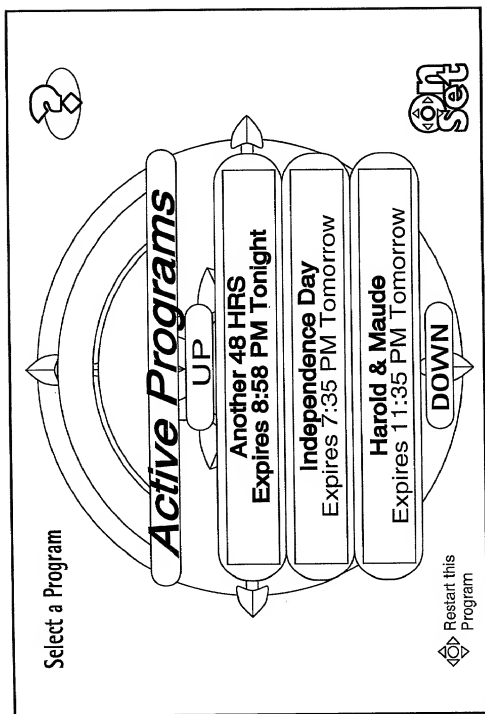 


FIG. 17

VO: This screen lets you decide whether to require a PIN Number to use OnSet on this TV. Move Left or Right to change settings. When you're ready, select "Save".



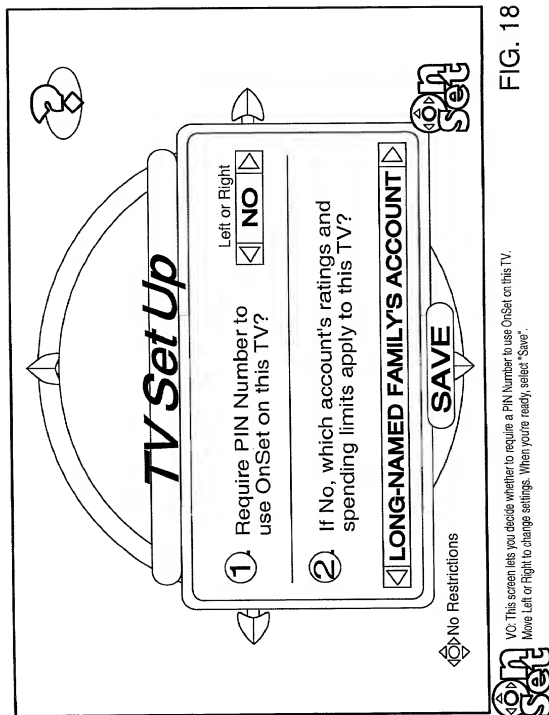 


FIG. 18

VO: This screen lets you decide whether to require a PIN Number to use OnSet on this TV. Move Left or Right to change settings. When you're ready, select "Save".

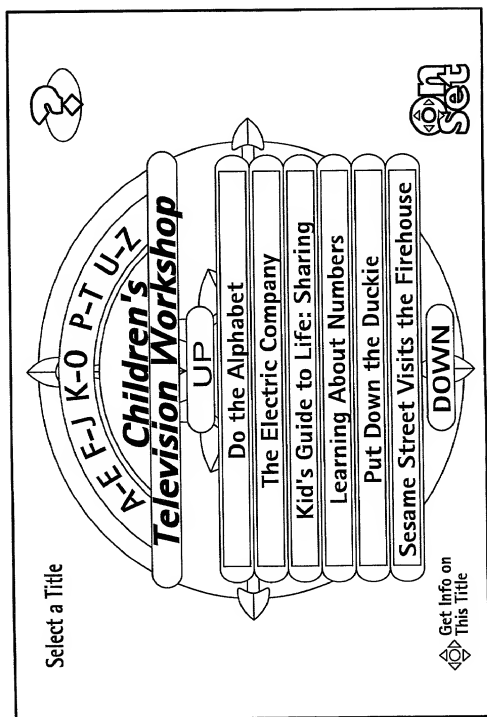 


FIG. 19